

1 Check Package Contents

Verify that your package includes the following contents:

- SonicWALL TZ 105 or TZ 105W Series Appliance
- Ethernet Cable
- Standard Power Adaptor and Cord
- Wireless Antennas (2) included with TZ 105W only

Power cord is for use in North America only.



2 Register



 
Registration MUST be completed prior to connecting to the appliance.

- In a Web browser, navigate to <http://www.mysonicwall.com/>
- If you do not have a MySonicWALL account, click the **Register Now** link to create an account.
- Under the **Quick Register** section of your MySonicWALL account, enter the Activation Key or Serial Number of the SonicWALL TZ series appliance you are registering.
- Confirm your serial number, enter a friendly name for your appliance, and enter your authentication code in the **Register Product** section.
- Click **Submit**.




3 Connect the SonicWALL TZ Appliance

- Connect the SonicWALL TZ 105 series appliance to the network using standard Ethernet cables as shown in the illustration.

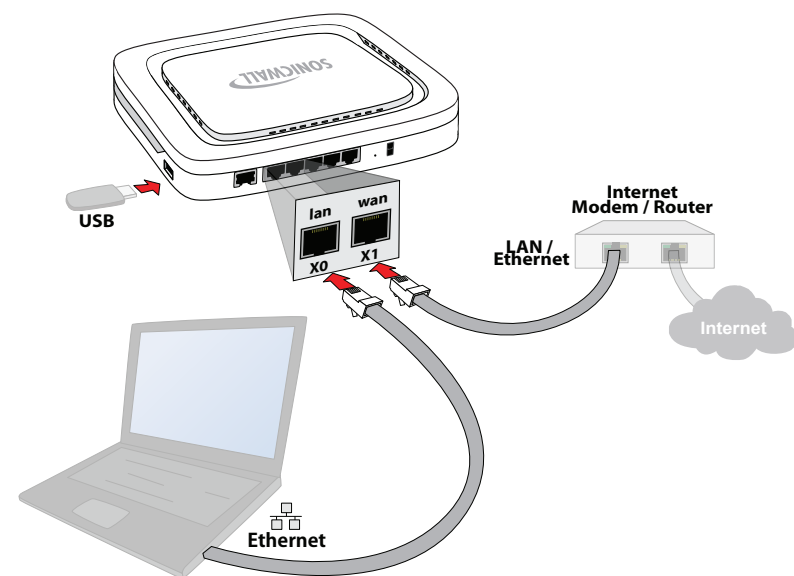


 - Connect the included power cable and adaptor, and plug into an appropriate outlet.

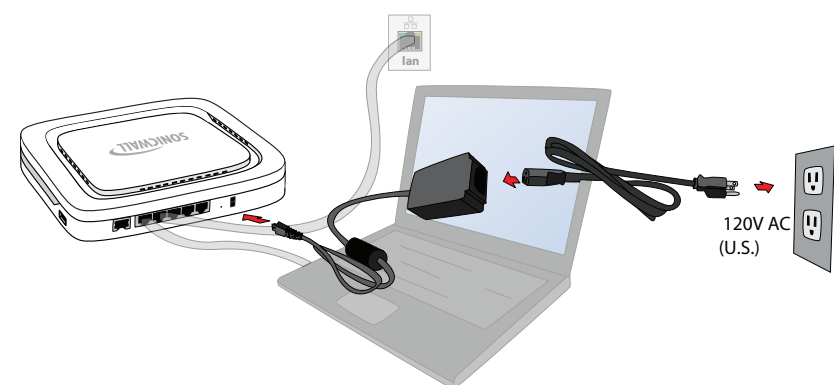

- The TZ 105 series appliance powers on and the orange "test" LED blinks during the boot sequence. Continue to Step 4 when the "test" LED is no longer lit.

 This process may take up to 2 minutes.

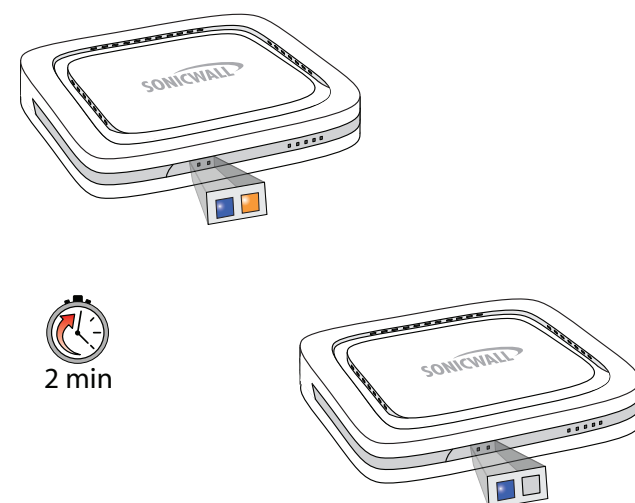


4 Configure the Management Host & Setup Wizard

Using the computer connected to the LAN port of the SonicWALL TZ 105 series appliance, navigate to <http://192.168.168.168/> in a Web browser.

You may need to configure the computer with an IP address on the 192.168.168.0 subnet, such as 192.168.168.20.

The Setup Wizard takes you through several basic steps to get your SonicWALL TZ series appliance configured for your network.

 After the Setup Wizard, the appliance may reboot. Please wait a few minutes while the appliance reboots to save the updated settings.



<http://192.168.168.168/>



 
5 Get the Latest Firmware

A valid support contract is required to download the latest firmware.


- Navigate to <http://www.mysonicwall.com> in your Web browser and log in.
- Click **Downloads**. From the **Download Center**, select “SonicWALL TZ 105 Firmware” from the **Software Type** list.
- Click the **Add To My Downloads** button of the firmware you wish to install for your SonicWALL TZ 105 series appliance.
- Navigate to the My Downloads tab, and click the link for the firmware to download. Then, save the file to a location on your computer.
- Log into the SonicWALL TZ series appliance, and navigate to the **System > Settings** page.
- Click the **Upload New Firmware** button.
- Click the **Choose File** button to select the firmware you just downloaded. Then, click **Upload**.



Rear Panel

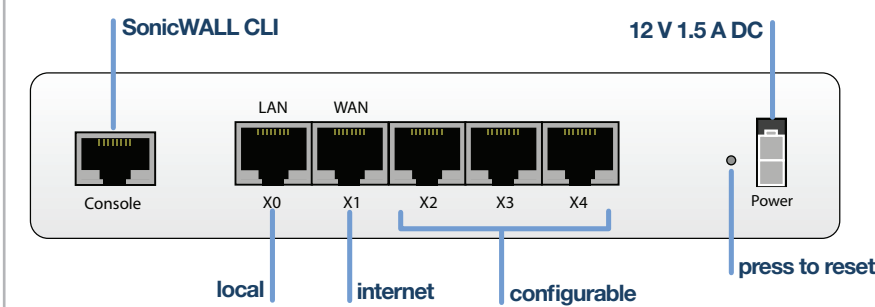


Status Lights

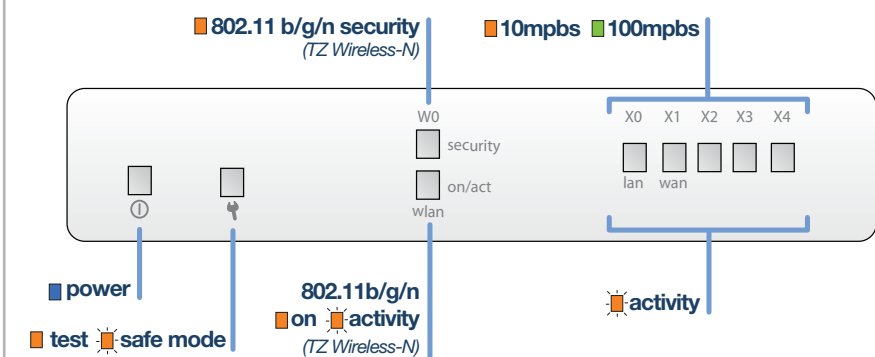 

Related Technical Documentation

The SonicWALL Product Support online library is located at:
 
<http://www.sonicwall.com/us/support/3653.html>

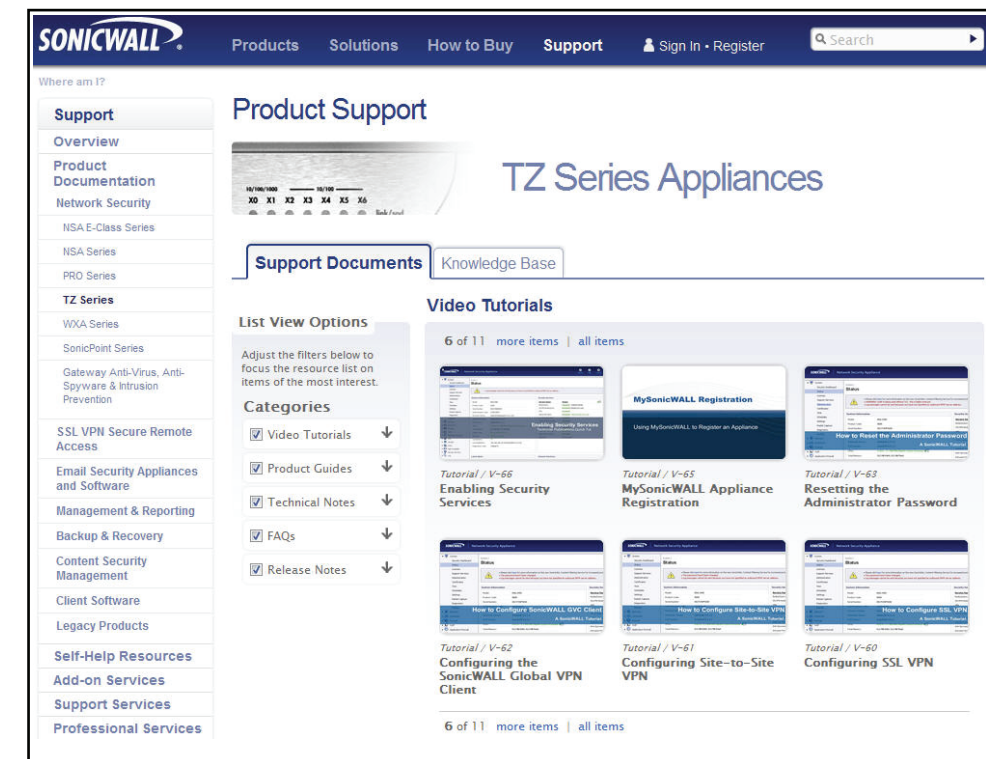

Safety Information / Sicherheit Informationen

Regulatory Model/Type Product Name
APL22-09B TZ 105
APL22-09C TZ 105W

Mounting the SonicWALL

- Mount in a location away from direct sunlight and sources of heat. A maximum ambient temperature of 104° F (40° C) is recommended.
- Route cables away from power lines, fluorescent lighting fixtures, and sources of noise such as radios, transmitters, and broadband amplifiers.
- The included power cord is intended for use in North America only. For European Union (EU) customers, a power cord is not included.
- Ensure that no water or excessive moisture can enter the unit.
- Allow unrestricted airflow around the unit and through the vents on the side of the unit. A minimum of 1 inch (25.4mm) clearance is recommended.
- Consideration must be given to the connection of the equipment to the supply circuit. The effect of overloading the circuits has minimal impact on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings must be used when addressing this concern.

Lithium Battery Warning

The Lithium Battery used in the SonicWALL security appliance may not be replaced by the user. Return the SonicWALL security appliance to a SonicWALL-authorized service center for replacement with the same or equivalent type recommended by the manufacturer. If, for any reason, the battery or SonicWALL security appliance must be disposed of, do so following the battery manufacturer's instructions.

Cable Connections

All Ethernet and RS232 (Console) cables are designed for intra-building connection to other equipment. Do not connect these ports directly to communication wiring or other wiring that exits the building where the SonicWALL is located.

Power Supply Information

If the power supply is missing from your SonicWALL product package, please contact SonicWALL Technical Support at 408-752-7819 for a replacement. This product should only be used with a UL listed power supply marked "1.T.E. LPS" with an output rated 12V DC, minimum 1.5 A, Tma: minimum 40 degree C.

Weitere Hinweise zur Montage

- Wählen Sie für die Montage einen Ort, der keinem direkten Sonnenlicht ausgesetzt ist und sich nicht in der Nähe von Wärmequellen befindet. Die Umgebungstemperatur darf nicht mehr als 40 °C betragen.
- Achten Sie darauf, dass sich die Netzkabel nicht in der unmittelbaren Nähe von Stromleitungen, Leuchtstoffröhren und Störquellen wie Funksendern oder Breitbandverstärkern befinden.
- Das beigelegte Netzkabel ist nur für den Gebrauch in Nordamerika und Japan vorgesehen. Für Kunden in der Europäischen Union (EU) ist ein Netzkabel nicht im Lieferumfang enthalten.
- Stellen Sie sicher, dass das Gerät vor Wasser und hoher Luftfeuchtigkeit geschützt ist.
- Stellen Sie sicher, dass die Luft um das Gerät herum zirkulieren kann und die Lüftungsschlitze an der Seite des Gehäuses frei sind. Hier ist ein Belüftungsabstand von mindestens 26 mm einzuhalten.
- Prüfen Sie den Anschluss des Geräts an die Stromversorgung, damit der Überstromschutz sowie die elektrische Leitung nicht von einer eventuellen Überlastung der Stromversorgung beeinflusst werden. Prüfen Sie dabei sorgfältig die Angaben auf dem Aufkleber des Geräts.

Hinweis zur Lithiumbatterie

Die in der Internet Security Appliance von SonicWALL verwendete Lithiumbatterie darf nicht vom Benutzer ausgetauscht werden. Zum Austauschen der Batterie muss die SonicWALL in ein von SonicWALL autorisiertes Service-Center gebracht werden. Dort wird die Batterie durch denselben oder entsprechenden, vom Hersteller empfohlenen Batterietyp ersetzt. Beachten Sie bei einer Entsorgung der Batterie oder der SonicWALL Internet Security Appliance die diesbezüglichen Anweisungen des Herstellers.

Kabelverbindungen

Alle Ethernet- und RS232-C-Kabel eignen sich für die Verbindung von Geräten in Innenräumen. Schließen Sie an die Anschlüsse der SonicWALL keine Kabel an, die aus dem Gebäude in dem sich das Gerät befindet, herausgeführt werden.

Informationen zur Stromversorgung

Wenn das Netzteil nicht im Lieferumfang des SonicWALL Produkts enthalten ist, wenden Sie sich bitte an den Technischen SonicWALL Support unter +1-408-752-7819 für einen Ersatz. Dieses Produkt sollte nur mit einem UL-konformen Netzteil mit dem Logo "1.T.E. LPS" und einer Ausgangsleistung von 12 VDC, mind. 1.5 A, Tma: mind. 40 Grad C.

Regulatory and Compliance

For complete regulatory compliance instructions and declaration of conformities, refer to the *SonicWALL TZ Series Safety & Product Regulatory Guide* found on the SonicWALL support Web site: <http://www.sonicwall.com/us/support.html>

Model APL22-09B only

Complies with EN55022 Class B and CISPR22 Class A.

Canadian Radio Frequency Emissions Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Model APL22-09C only

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

CE0560

Indoor Only	Binnen Slechts
D'intérieur Seulement	Innen Nur
Dell'interno Soltanto	Indoor Somen Te
De Interior Solamente	

This equipment may be operated in:
Betrieb dieser Ausrüstung wird innen erlaubt:
L'opération de cet équipement est permise dans:

AT	BE	CY	CZ	DK
EE	FI	FR	DE	HU
IE	IT	LT	LU	NL
NO	PL	PT	SK	ES
CH	GB	BG	GR	LV
MT	RO	SI	SE	

Country and channel selection is made in software. Follow user documentation to make country and channel setting.

Land und Kanalauswahl sind in Software gemacht. Folgen Sie Verbraucherdokumentation, um Land und Kanal zu machen, setzen.

La sélection de pay et canal est faite dans le logiciel. Suivez la documntation d'utilisateur pour faire le pays es la canal sélection.

Copyright Notice
© 2012 SonicWALL, Inc.
All rights reserved.

Under the copyright laws, this manual or the software described within cannot be copied, in whole or part, without the written consent of the manufacturer, except in the normal use of the software to make a backup copy. The same proprietary and copyright notices must be affixed to any permitted copies as were affixed to the original. This exception does not allow copies to be made for others, whether or not sold, but all of the material purchased (with all backup copies) can be sold, given, or loaned to another person. Under the law, copying includes translating into another language or format.

Network Security Series

SonicWALL TZ 105 / 105W Series

Quick Start Guide

