

PRIVACY HARDWOOD UNDERLAYMENT



PHWU has the correct density to absorb footstep noise under traditional hardwood floors.

Simple to install loose laid on any subfloor.

Available Fabric Facing for Glue Down Applications



PHWU under nail down hardwood floors to reduce footstep noise to the rooms below. At only 1/8" thick PHWU will not affect transitions.

Footstep noise (vibration) is transmitted through the finished floor into the structure below and heard downstairs. Traditional hardwood floors are notoriously loud in the rooms below. Privacy Hardwood Underlay™ is a uniquely engineered product that will absorb footstep noise when used under traditional nail down hardwood floors.

Privacy Hardwood Underlay™ is a locally reactive floor soundproofing product; it absorbs the vibration caused when footsteps occur, at the source. Footstep vibration is significantly reduced before it travels into the structure. Utilizing a soundproofing underlay when installing your floor, will create far quieter rooms below in your home or office.

Privacy Hardwood Underlay™ is installed loose laid, wall to wall with no gaps. First install our perimeter isolation gasket to prevent hard connections to walls, cut PHWU to size, tape all seams with our metal tape and install your finished hardwood floor. Leave a typical gap at the perimeter of the wood floor for expansion and install your baseboard.

We carry soundproofing underlayments for specific floor types; one-size-fits-all does not apply when soundproofing a floor. You need the right product, from the right company to be sure your project will be successful!



Solve your noise problem. Call now to get it right the first time 888-666-5090

With Sound Isolation Company you will get the help you need: expert design, product selection and installation instructions. We have the experience you need for a partnership that will work.

SOUND [ISOLATION] COMPANY

SO QUIET, IT'S SIC

www.soundisolationcompany.com

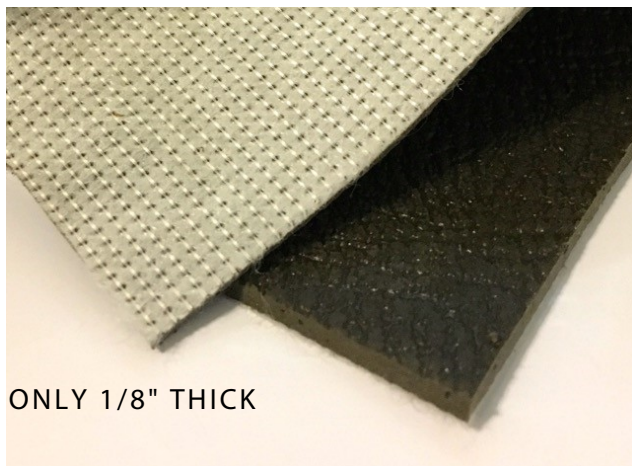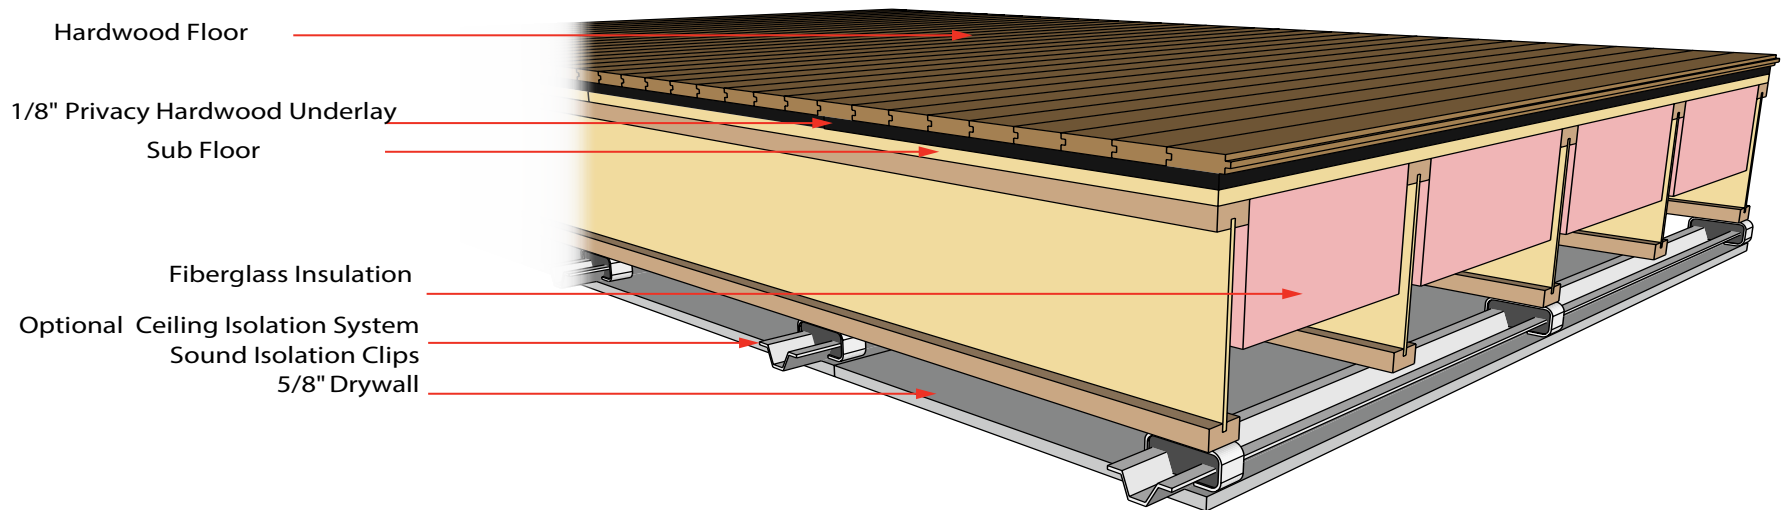

Drawing:	Hardwood Floor/Ceiling Assembly
Project Name	
Contractor	
Notes:	<p>1) Subfloor should be clean and level- replace any damaged plywood sheets, acoustical caulk all gaps</p> <p>2) PHWU is installed with fabric facing up- <u>loose laid</u>- all seams and perimeter sealed with provided foil tape</p> <p>3) Install finished floor- follow manufacturers instructions and <u>maintain a gap at the perimeter for expansion</u></p>